



Mixels


41529




NURP-NAUT




1

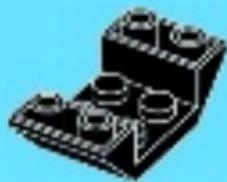

2

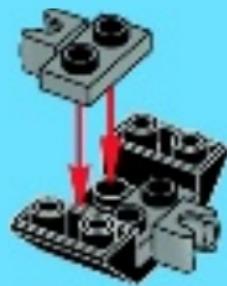

3

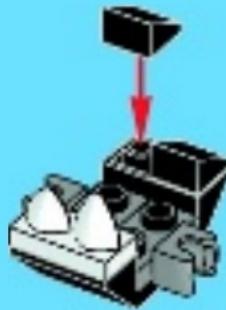


4



5



6

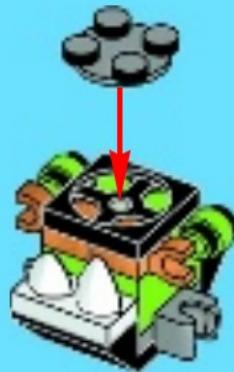

1



2



3




2x

7




8

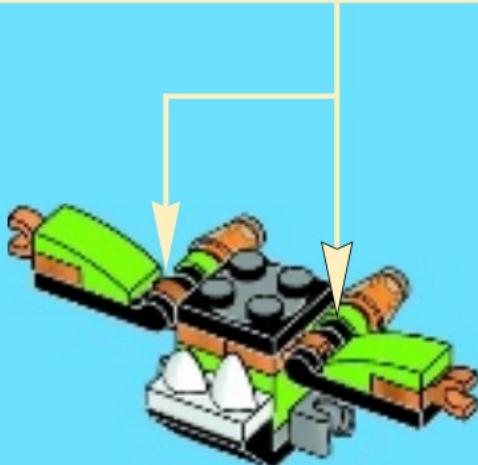

4



1

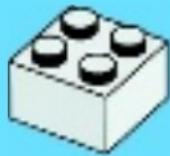


2



3



4

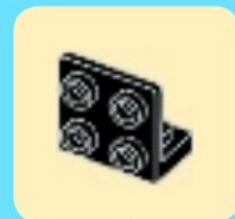


5




6



7

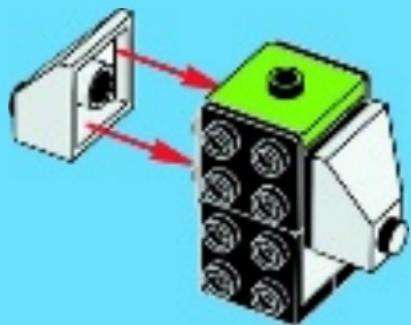

8

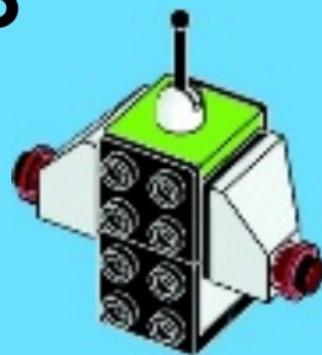

1




2



3



9

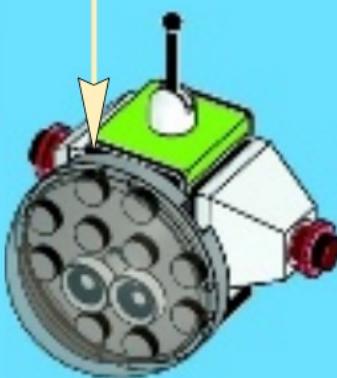

1




2




3



10

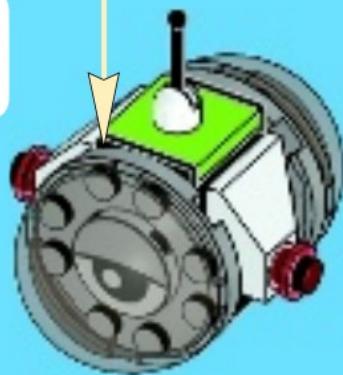

11

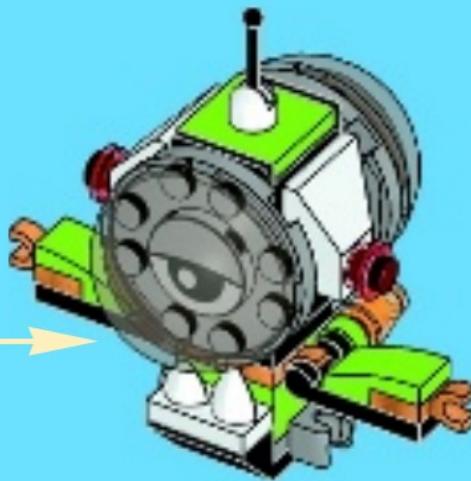




1




2

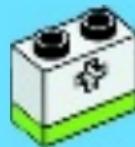


3



4

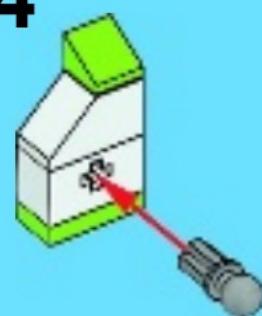

12

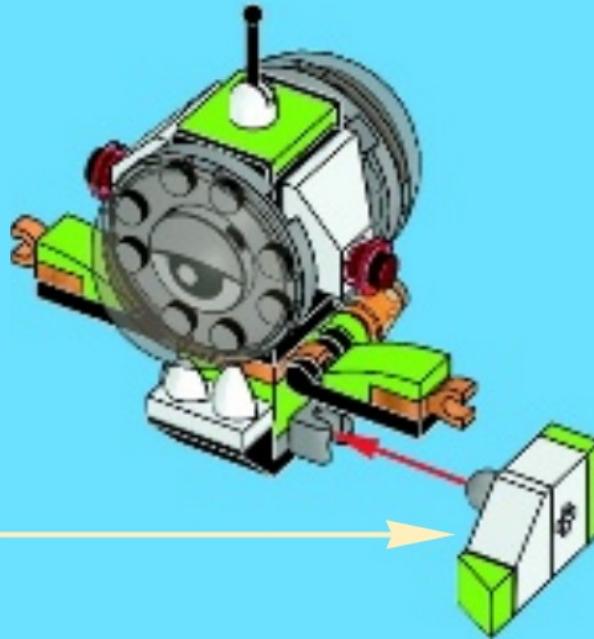


13



1




2

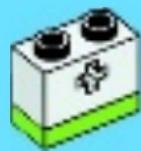


3



4

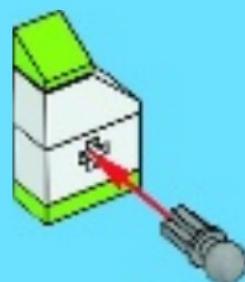

13

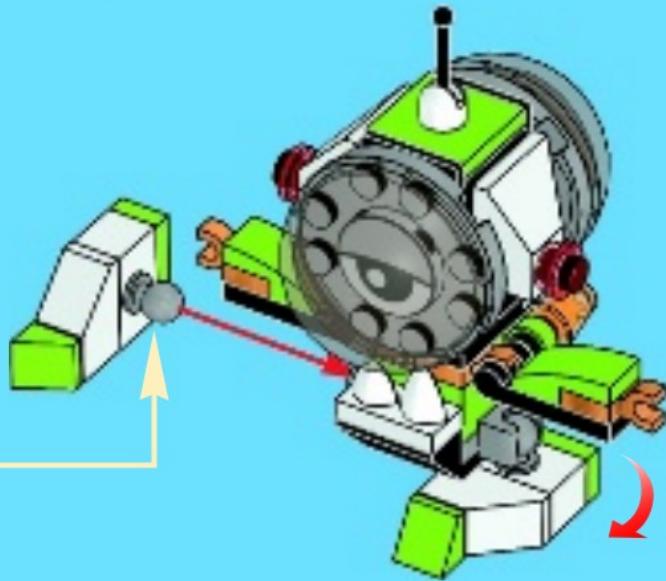

15



2x
4567338



4x
4523160



1x
6100970



2x
4504382



1x
4220632



2x
300301



2x
3005741



2x
6043656



2x
4211375



1x
4188534



2x
4504372



2x
4233486



2x
6079676



1x
4540203



2x
4515351



6x
6000650



2x
6069006



2x
4121932



Customer Service

Kundenservice

Service Consommateurs


Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :

1-800-422-5346 :



2x
4515368



2x
4164037



2x
6029156



1x
368026



2x
4632576



1x
6046384



ROKIT
41527



NIKSPUT
41528



NURP-NAUT
41529



ORBITONS
MAX!



LEGO.com/mixels



Mixels



LEGO.com/mixels





Mixels

CN
CARTOON NETWORK